


Tumbler Screening Machines TSM / Tsi

Maximum screening quality for fine and ultra-fine products

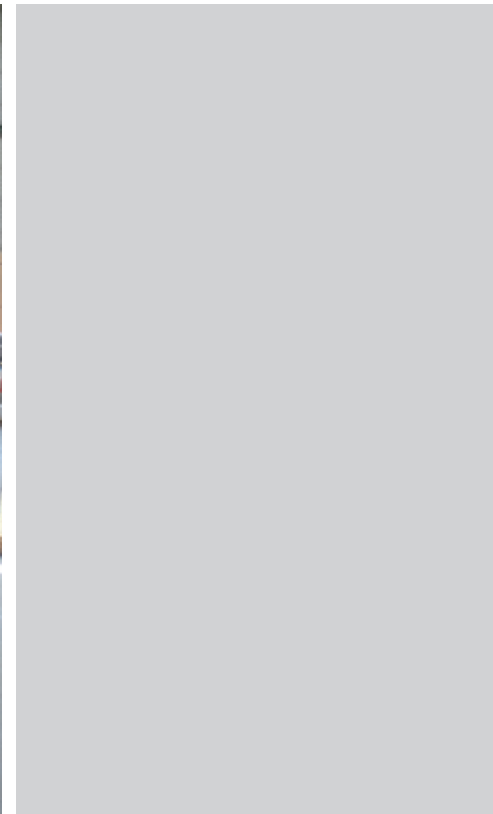

Tumbler Screening Machines TSM / Tsi For intelligent fine particle screening

The highly developed genuine Allgaier tumbler screening machines have set the standard for fine and ultra-fine screening technologies of all types of dry bulk material.

Modified and improved design features already successfully applied to the TSM product line are now implemented to the entire tsi product line as well. Featuring 9 different machine sizes ranging in diameters from 600 to 2,900 mm Allgaier currently offers the widest product range of tumbler screening machines available on the market worldwide.

Introducing the world's largest tumbler screening machine the tsi 290 combined with a number of patented new features such as fully segmented screen inserts Allgaier has extended once again its technological leadership even further.

Industrial Applications

- Chemicals/Pharmaceuticals
- Aggregates and Ores
- Food
- Waste/Recycling
- Plastics
- Metallurgy
- Wood/Biofuels
- Ceramics
- Feed

Technical and process related advantages

- Screening efficiency up to 99% achievable
- No particle destruction of sensitive products due to gentle screening
- Higher specific screening performance in comparison to purely vibrating systems due to higher screening amplitude
- Stable screen motion even at full load




- The steplessly adjustable tumbling motion enables precisely controlled particle retention of the product on the screen enabling screening capacity and efficiency to be balanced to the optimum
- The three dimensional screen motion can easily be recorded enabling reproducible operating conditions to provide a constant high product quality
- Large variety of product specific mesh cleaning systems are available
- Rapid screen replacement systems optionally available
- Modular elements system allow multiple machine concept variety
- ATEX approved machine models available
- Dustproof construction, even gas tight machine models available
- Low noise and low vibrating operation
- Maintenance friendly

Unique tumbling type motion

The adjustment of the machine in response to the product to be screened provides an exactly defined three dimensional eccentric motion pattern with radial and tangential inclination.

During operation of the tumbler screening machine the radial inclination causes the product on the screen to move from the center towards the edge of the screen while the tangential inclination leads to a circular motion of the product on the screen. The combined impact of both of these forces causes the product in a helical motion of upon the surface of the screen and therefore to a relatively long retention time. This provides an optimized result on fraction separation while at the same time minimizing the amount of oversized particles.

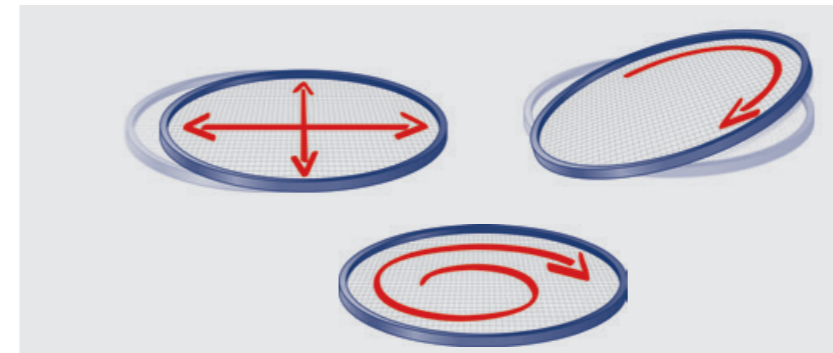

Options

- Internal screen inserts featuring replaceable slip-over edge sealings
- Machined screen frames equipped with O-Ring gasket i.e. for the pharmaceutical industry
- Fully segmented screen inserts optional with ultrasonic screen cleaning devices
- Mild steel and various stainless steel machine models
- Surface qualities ranging from glass beaded via grinded versions all the way to electrically polished finish
- Food grade elastomer parts (i.e. sealings, covers, etc.)
- Food grade glue for mesh cloth fixation on the screen frames
- Manual or pneumatic deck lifting devices
- Various mesh cleaning systems (ball-, ultrasonic-, air- and brush cleaning devices as well as combined cleaning systems)


ATEX approvals

ATEX approved machine models are available, for example, when operating the machine with explosively hazardous dust products or operating the machine in explosively hazardous areas. The following explosion-proof design certifications can be issued as per EC-type examination certificate IBExU12ATEX1095X according to RL 94/9/EG:

- For dry screening: II 1 / 2 D c T X
- For dry screening with additional Category 2G related to the equipment outside: II 1D / 2DG c IIB T X
- For dry screening in presence of combustible gases/vapours (hybrid-mixtures): II 1DG c T3 / 2DG c IIB T X

Customer testing center

Allgaier ensures reliable and efficient screening solutions based on more than 20,000 test runs performed over decades of engineering and development. By performing precise screening procedures in our testing laboratory, Allgaier determines the most suitable machine configuration for each individual application.

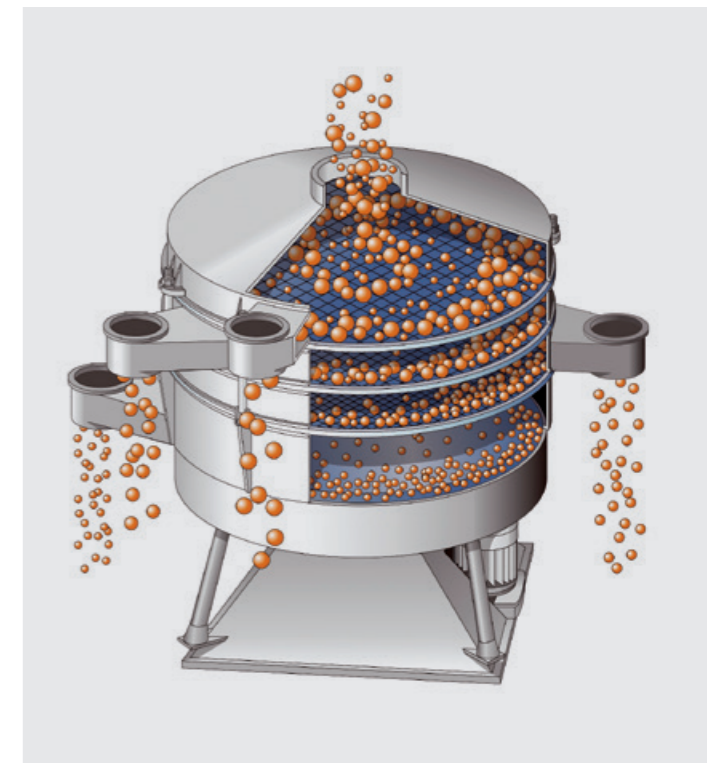

Heavy-duty for rugged applications

A specially designed, robust heavy-duty version featuring re-enforced bearings was developed to meet the rugged requirements of the minerals industry.



Our machine for demanding applications

The VA tumbler machine available in several stainless steel models meets highest demands within the chemical, pharmaceutical and food industries regarding corrosion protection.



Our largest machine

The Tsi 290 is our largest tumbler screening machine. Providing a screen diameter of almost 3 metres the Tsi 290 offers an extra screening area of 20% in comparison to the TSM 2600 model. In



addition the low overall height makes the Tsi 290 the most economical solution in many applications when expanding plants where the previously available screening capacity is no longer sufficient.



Types		TSM 600			TSM 950	TSM 1200	TSM 1600	TSM 2000	Tsi 210	Tsi 230	TSM 2600	Tsi 290
Diameter	mm	650			1,050	1,250	1,580	1,880	2,142	2,292	2,650	2,907
Screen area per deck	m ²	0.28			0.72	1.10	1.80	2.60	3.40	3.90	5.30	6.42
Net space requirement	m ²	0.36			1.20	1.57	2.50	3.54	4.60	5.30	6.76	8.60
Rated electr. power	kW	0.25			1.50	1.50	4.00	4.00	4.00	4.00	5.50	5.50
Mesh cleaning systems												
Bouncing ball cleaning		•			•	•	•	•	•	•	•	•
Ultrasonic cleaning		•			•	•	•	•	•	•	•	•
Combined ultrasonic and balls		•			•	•	•	•	•	•	•	•
Air cleaning		•			•	•	•	•	•	•	•	•
Combined ultrasonic and air		•			•	•	•	•	•	•	•	•
Brush cleaning		•			•	•	•	•	•	•	•	•
Combined air and brushes		•			•	•	•	•	•	•	•	•
Passing unit		•			•	•	•	•	•	•	•	•
Dimensions	mm/kg	Height/Weight			Height/Weight	Height/Weight	Height/Weight	Height/Weight	Height/Weight	Height/Weight	Height/Weight	Height/Weight
1-Deck		836/145			1,044/350	1,128/420	1,409/820	1,429/920	1,441/1,450	1,450/1,490	1,496/1,525	1,621/1,675
2-Decks		943/155			1,171/400	1,360/480	1,574/890	1,594/990	1,580/1,530	1,589/1,575	1,661/1,660	1,760/1,790
3-Decks		1,049/165			1,290/450	1,535/520	1,746/960	1,759/1,080	1,719/1,650	1,728/1,700	1,826/1,810	1,899/1,940
4-Decks		1,156/175			1,425/510	1,714/590	1,918/1,040	1,924/1,150	1,858/1,760	1,867/1,825	1,991/1,960	2,038/2,090
5-Decks		1,262/185			1,552/580	1,890/660	2,090/1,120	2,089/1,230	1,997/1,890	2,006/1,975	2,156/2,130	-

Optimized multiple deck combining system for maximum productivity

Screening process performance and quality are maximized by combining optimized screen deck modules.


This pays back quickly, particularly when handling high-quality bulk materials, since the proportion of oversize or undersize particles in the various fractions will seriously be reduced.

In addition to the examples shown here, Allgaier offers a wide range of machinery combinations for almost any given application.

-  **coarse**
-  **medium**
-  **medium-fine**
-  **fine**

Double screening machine DS

The screening in two fractions with two decks of the same screen mesh aperture lead to a maximum recovery of the fine product.

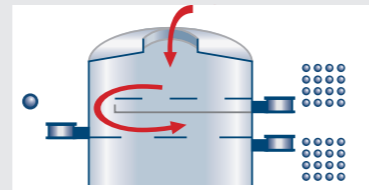


Continuous mesh cleaning guarantees highest screening quality

Due to its round body and its unique drive system the tumbler screening machines are particularly suitable for operating with various types of mechanically driven rotating mesh cleaning devices.

The screen is continuously cleaned during the screening process ensuring high screening quality and a constantly high product flow.


Bouncing balls

The bouncing ball mesh cleaning device available in several variations is the universal cleaning system for numerous granular products.

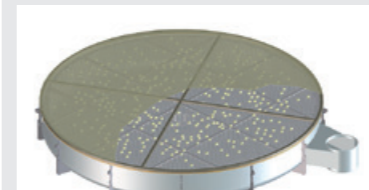


Ultrasonic

Ultrasonic screen cleaning is particularly suitable for applications with fine mesh apertures ranging from 20 to 1,000 µm.

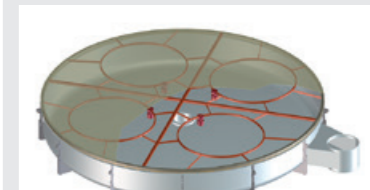


Double screening machine with pre-screening DS+1 (2)

The number of fractions produced by a DS screening machine can be increased by adding one or two coarse screens on top.

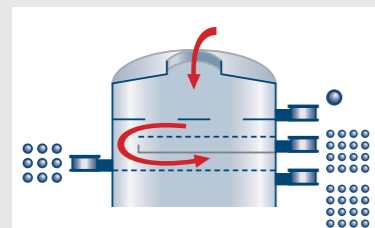


Double capacity screening machine DL

When screening in two fractions only, the output can almost be doubled by using a DL machine instead of a single deck machine.

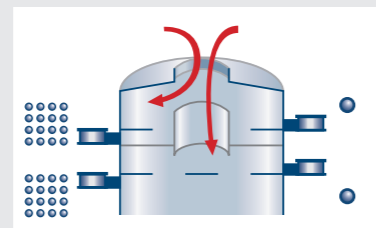


Two stage screening machine for reversed screening DSU

The fine material will be removed first while the coarse material is acting as a cleaner and improves this way the classification of the fine material.

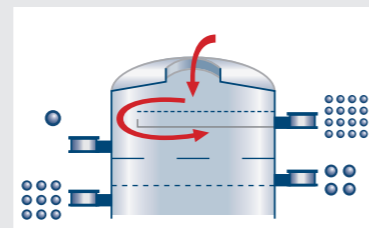


Combined ultrasonic and balls

For a maximum of product throughput and permanent mesh cleaning.

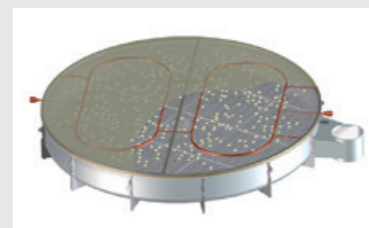


Air Flow

High speed air flow via rotating arms placed directly under the screen blows particles caught in the mesh. This is an ideal solution for sticky products.

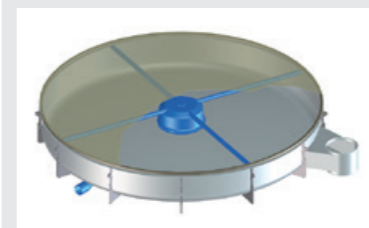


Combined ultrasonic and air

Applicable when processing products extremely critical to screen such as fine plastic powders etc.

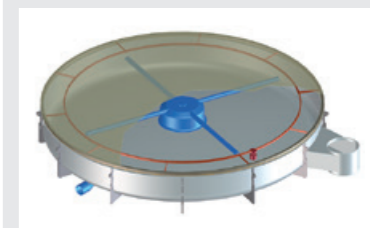


Conical rolling brushes

Rotating conical brushes directly under the screen gently clean the screens and with low-wear. Typically used for spherical products blinding the mesh.

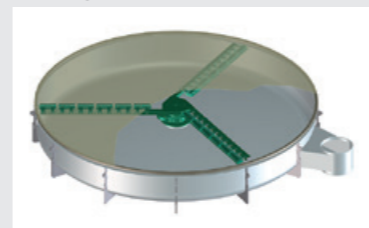


Combined air and brushes

This is an effective cleaning system for greasy or electrostatically charged products.

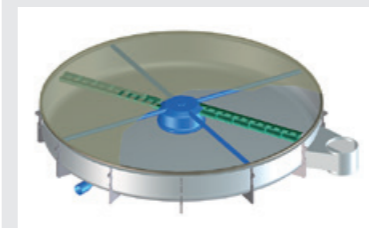

Passing/straining unit

Allow gentle straining disagglomeration of products like instant coffee by using steel or plastic spatulas rotating on top of the screen.

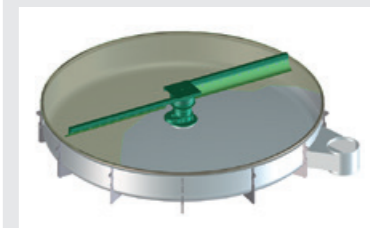

ALLGAIER Process Technology GmbH

Ulmer Straße 45
73066 Uhingen
Deutschland
Telefon: +49 7161 301-175
Telefax: +49 7161 34268
process-technology@allgaier-group.com

